

123HD60

123HD65x

Spare parts

Ersatzteile

Pièces détachées

Reserve onderdelen

Repuestos

Reservdelar

Replaces

Ersetzt

Remplace

Vervangt

Reemplaza

Ersätter

544 40 86-01

A

 
*compl 544 30 46-01

 
 
Husqvarna
123HD60

123HD60 544 38 32-01

544 04 38-01 123HD65


Husqvarna
123HD65

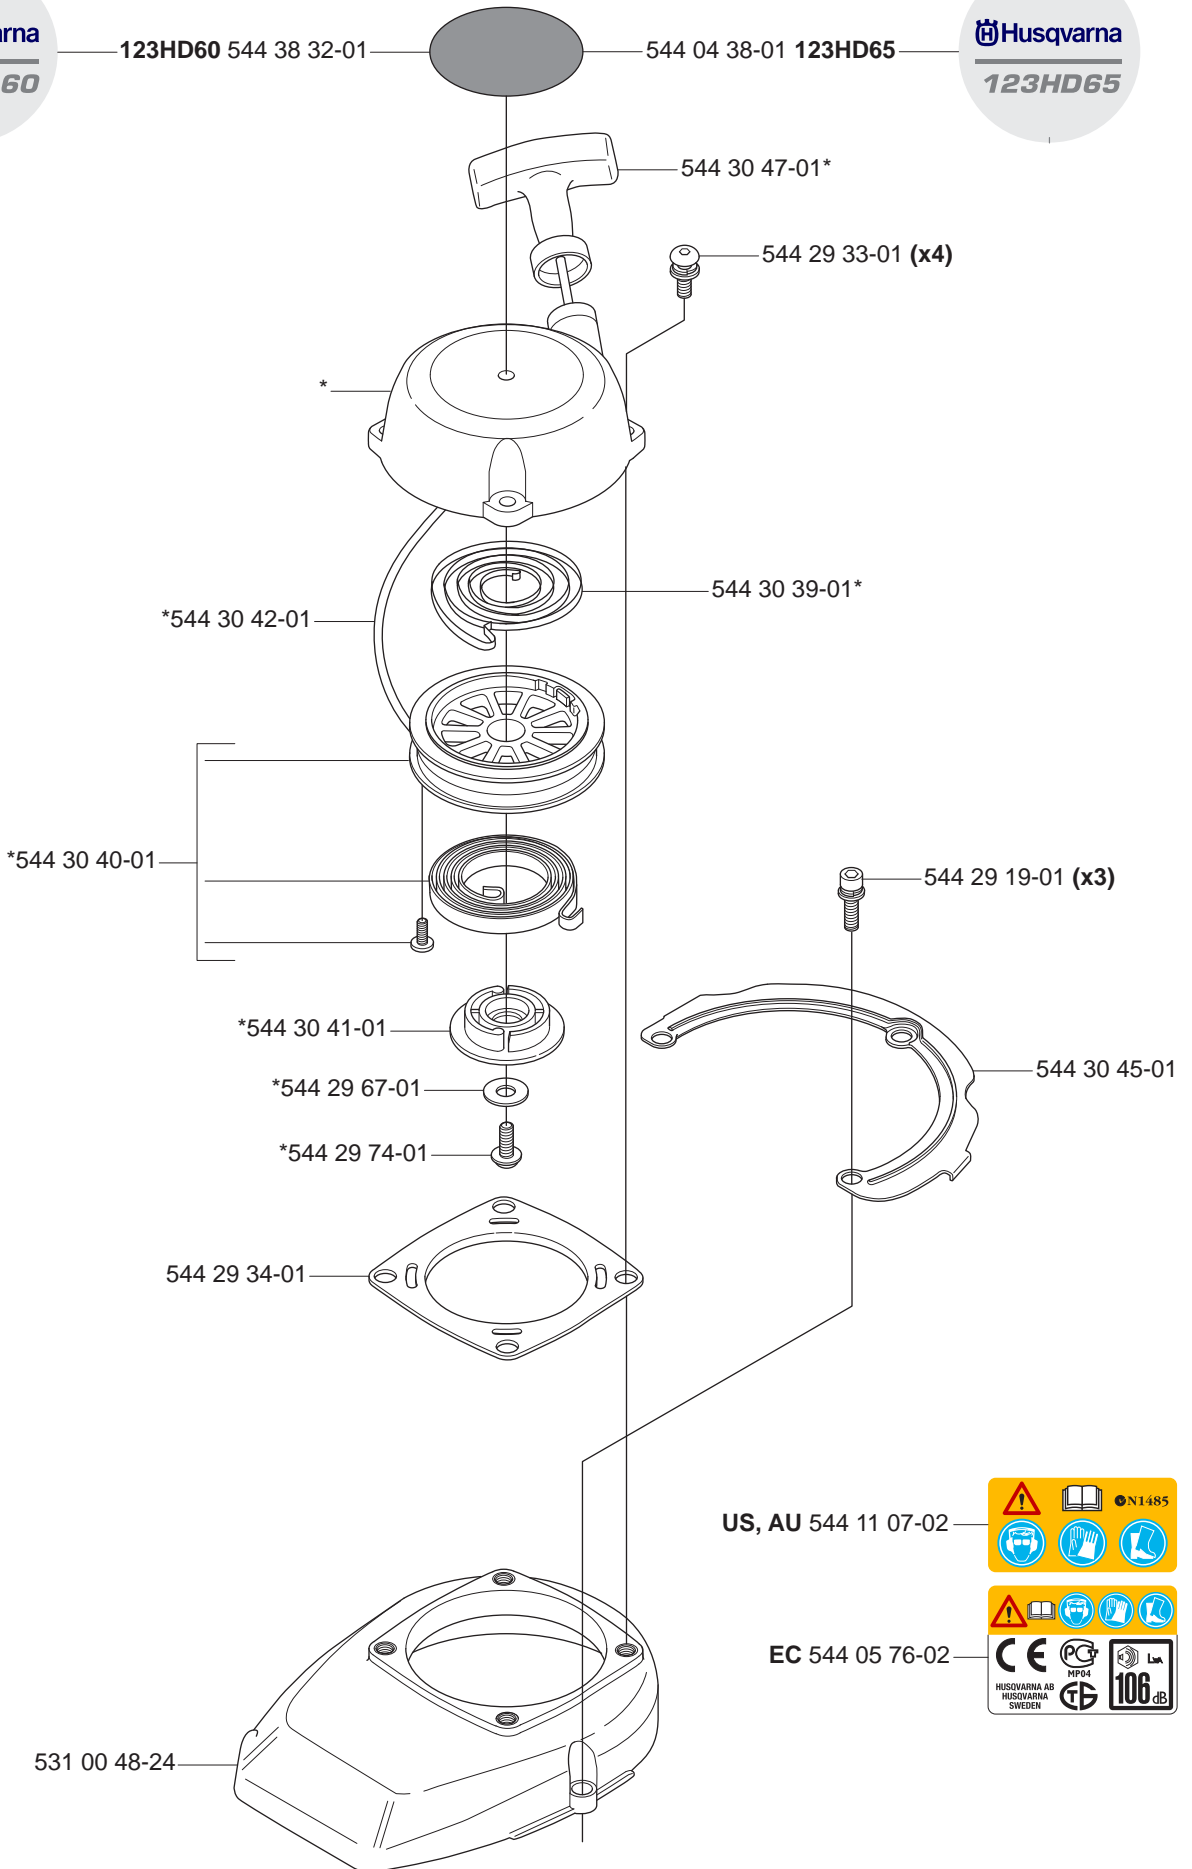

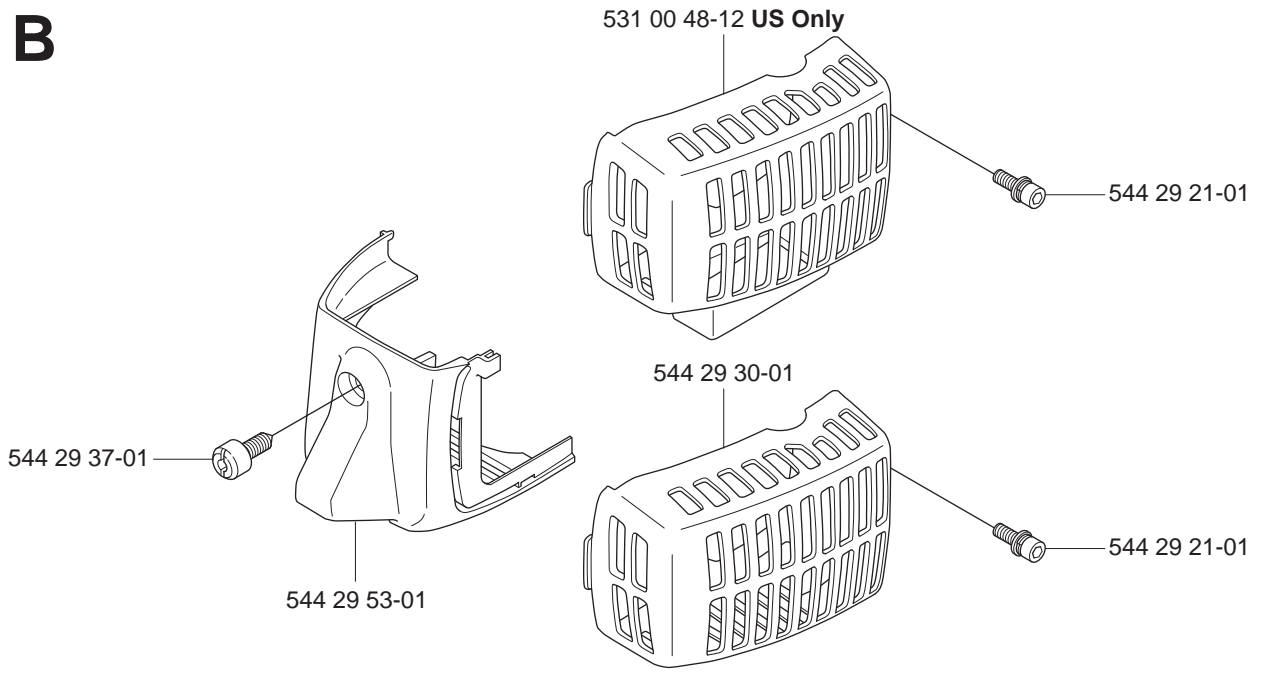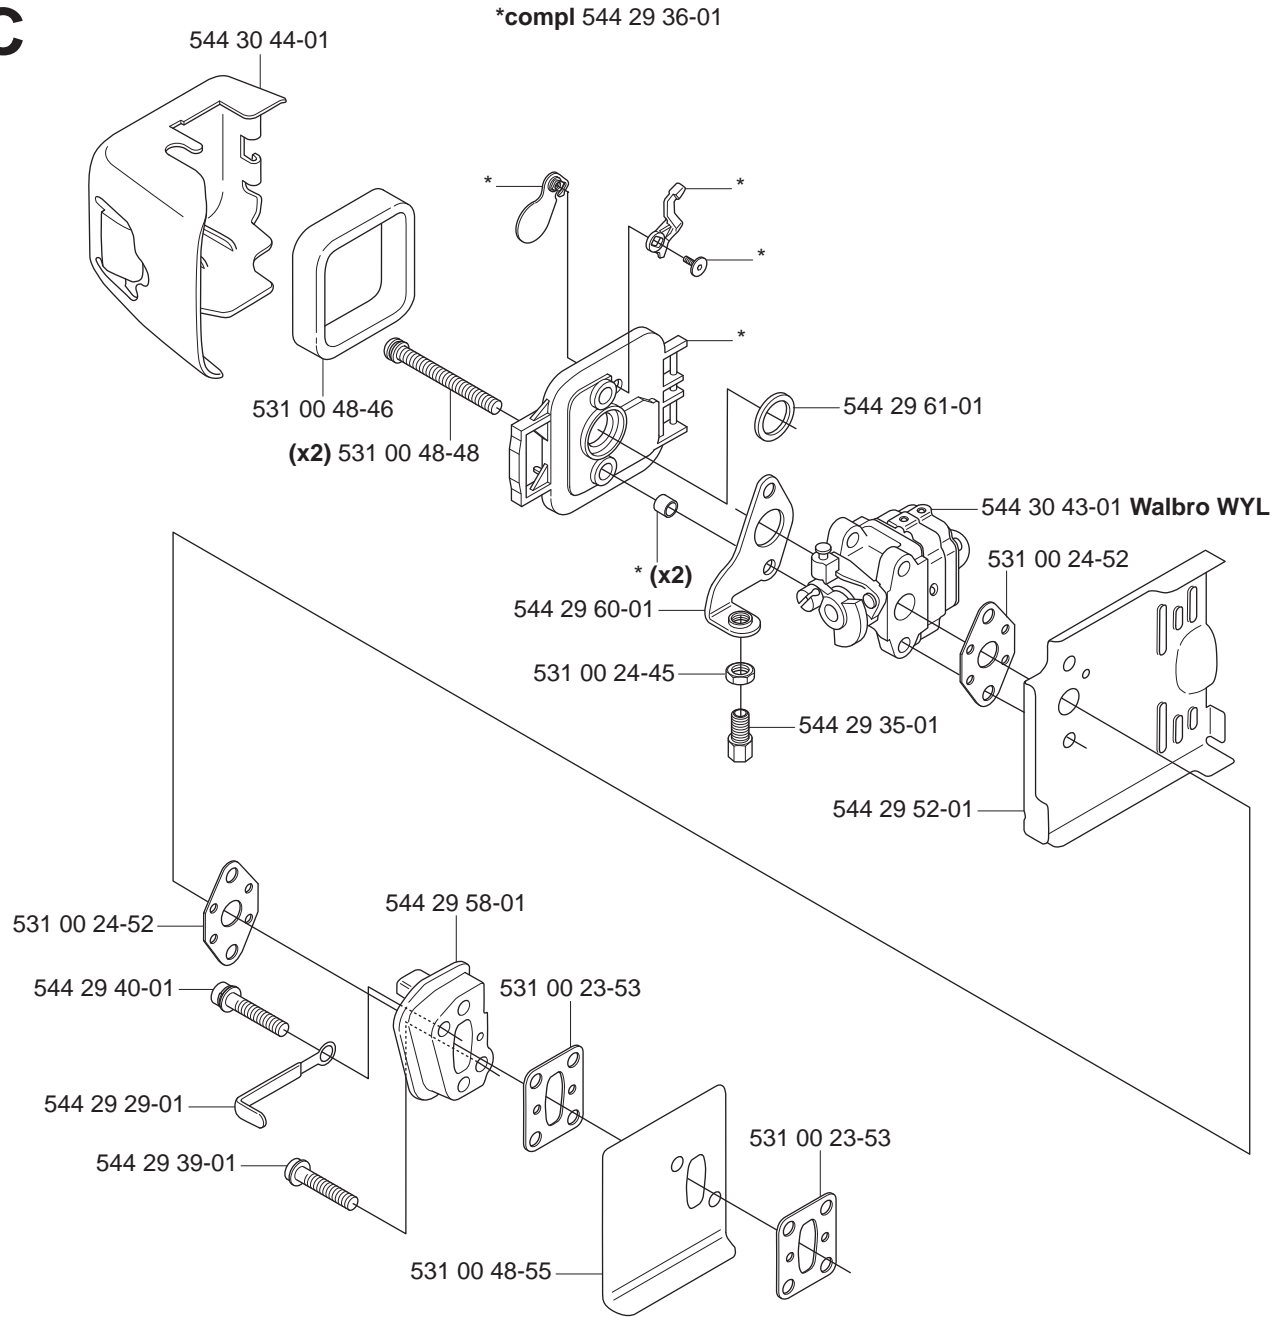
B**C**

F US Only

 
*compl 504 09 49-01

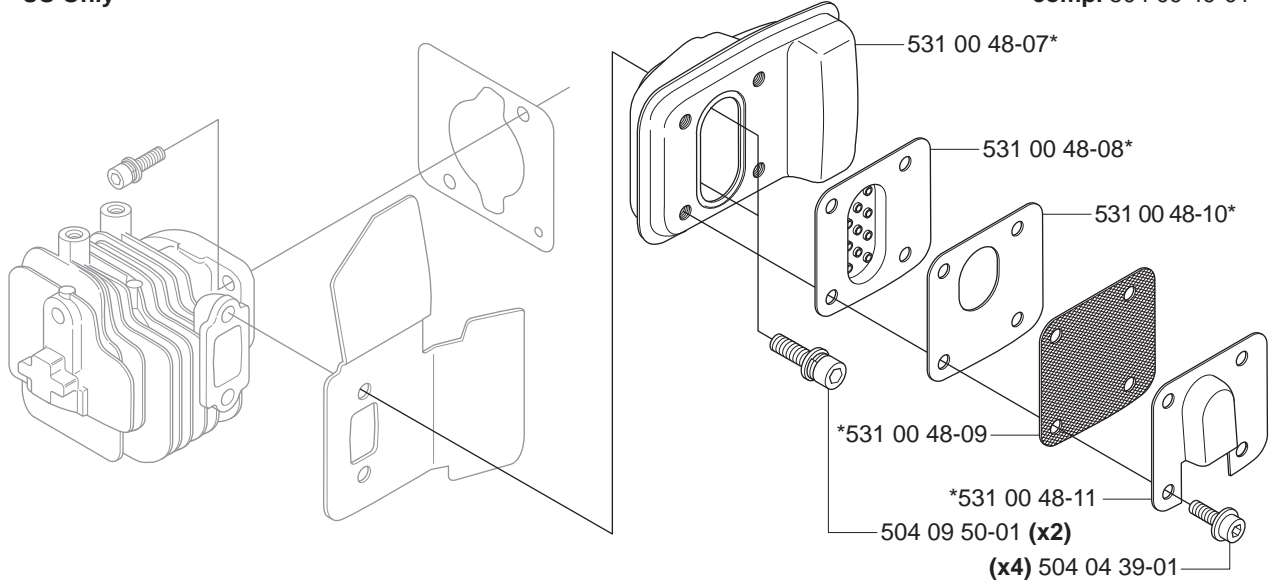

G

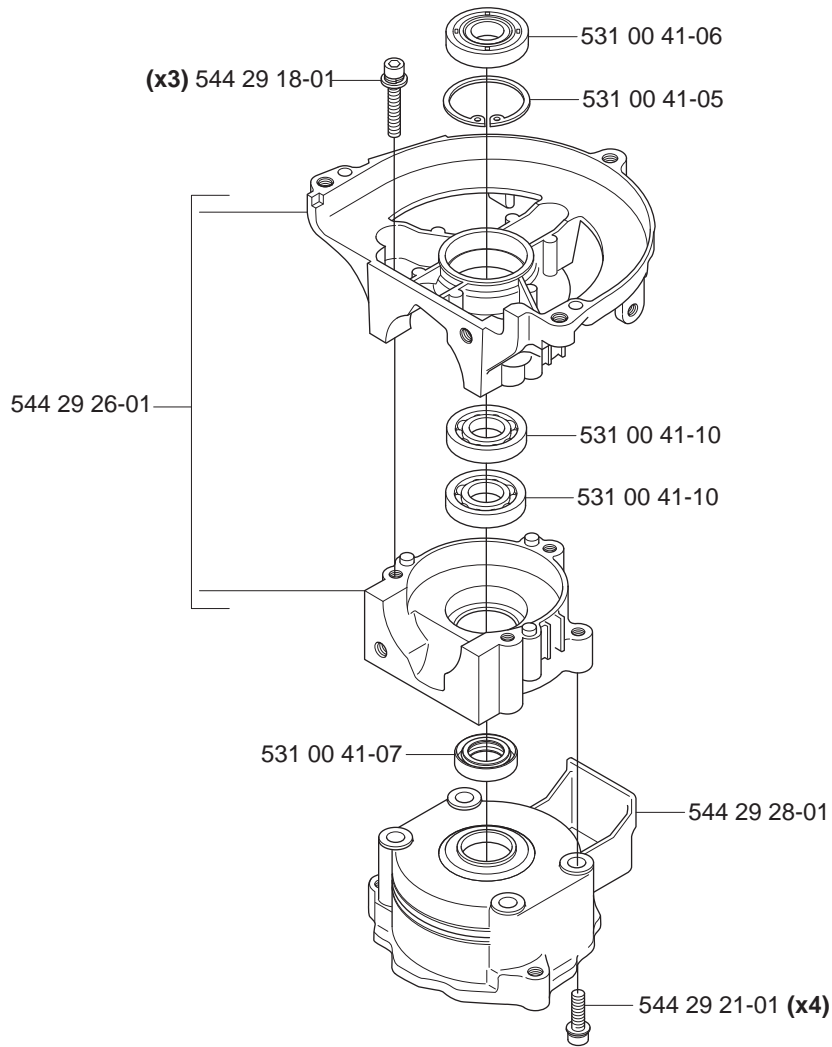 


H

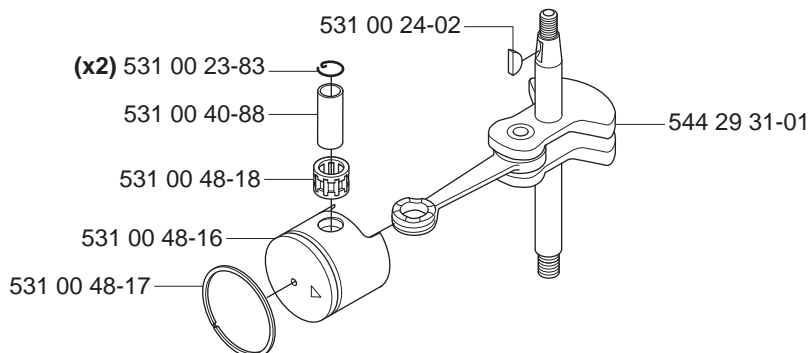 


J

 
*compl 537 28 00-06 123HD60
**compl 537 28 00-05 123HD65

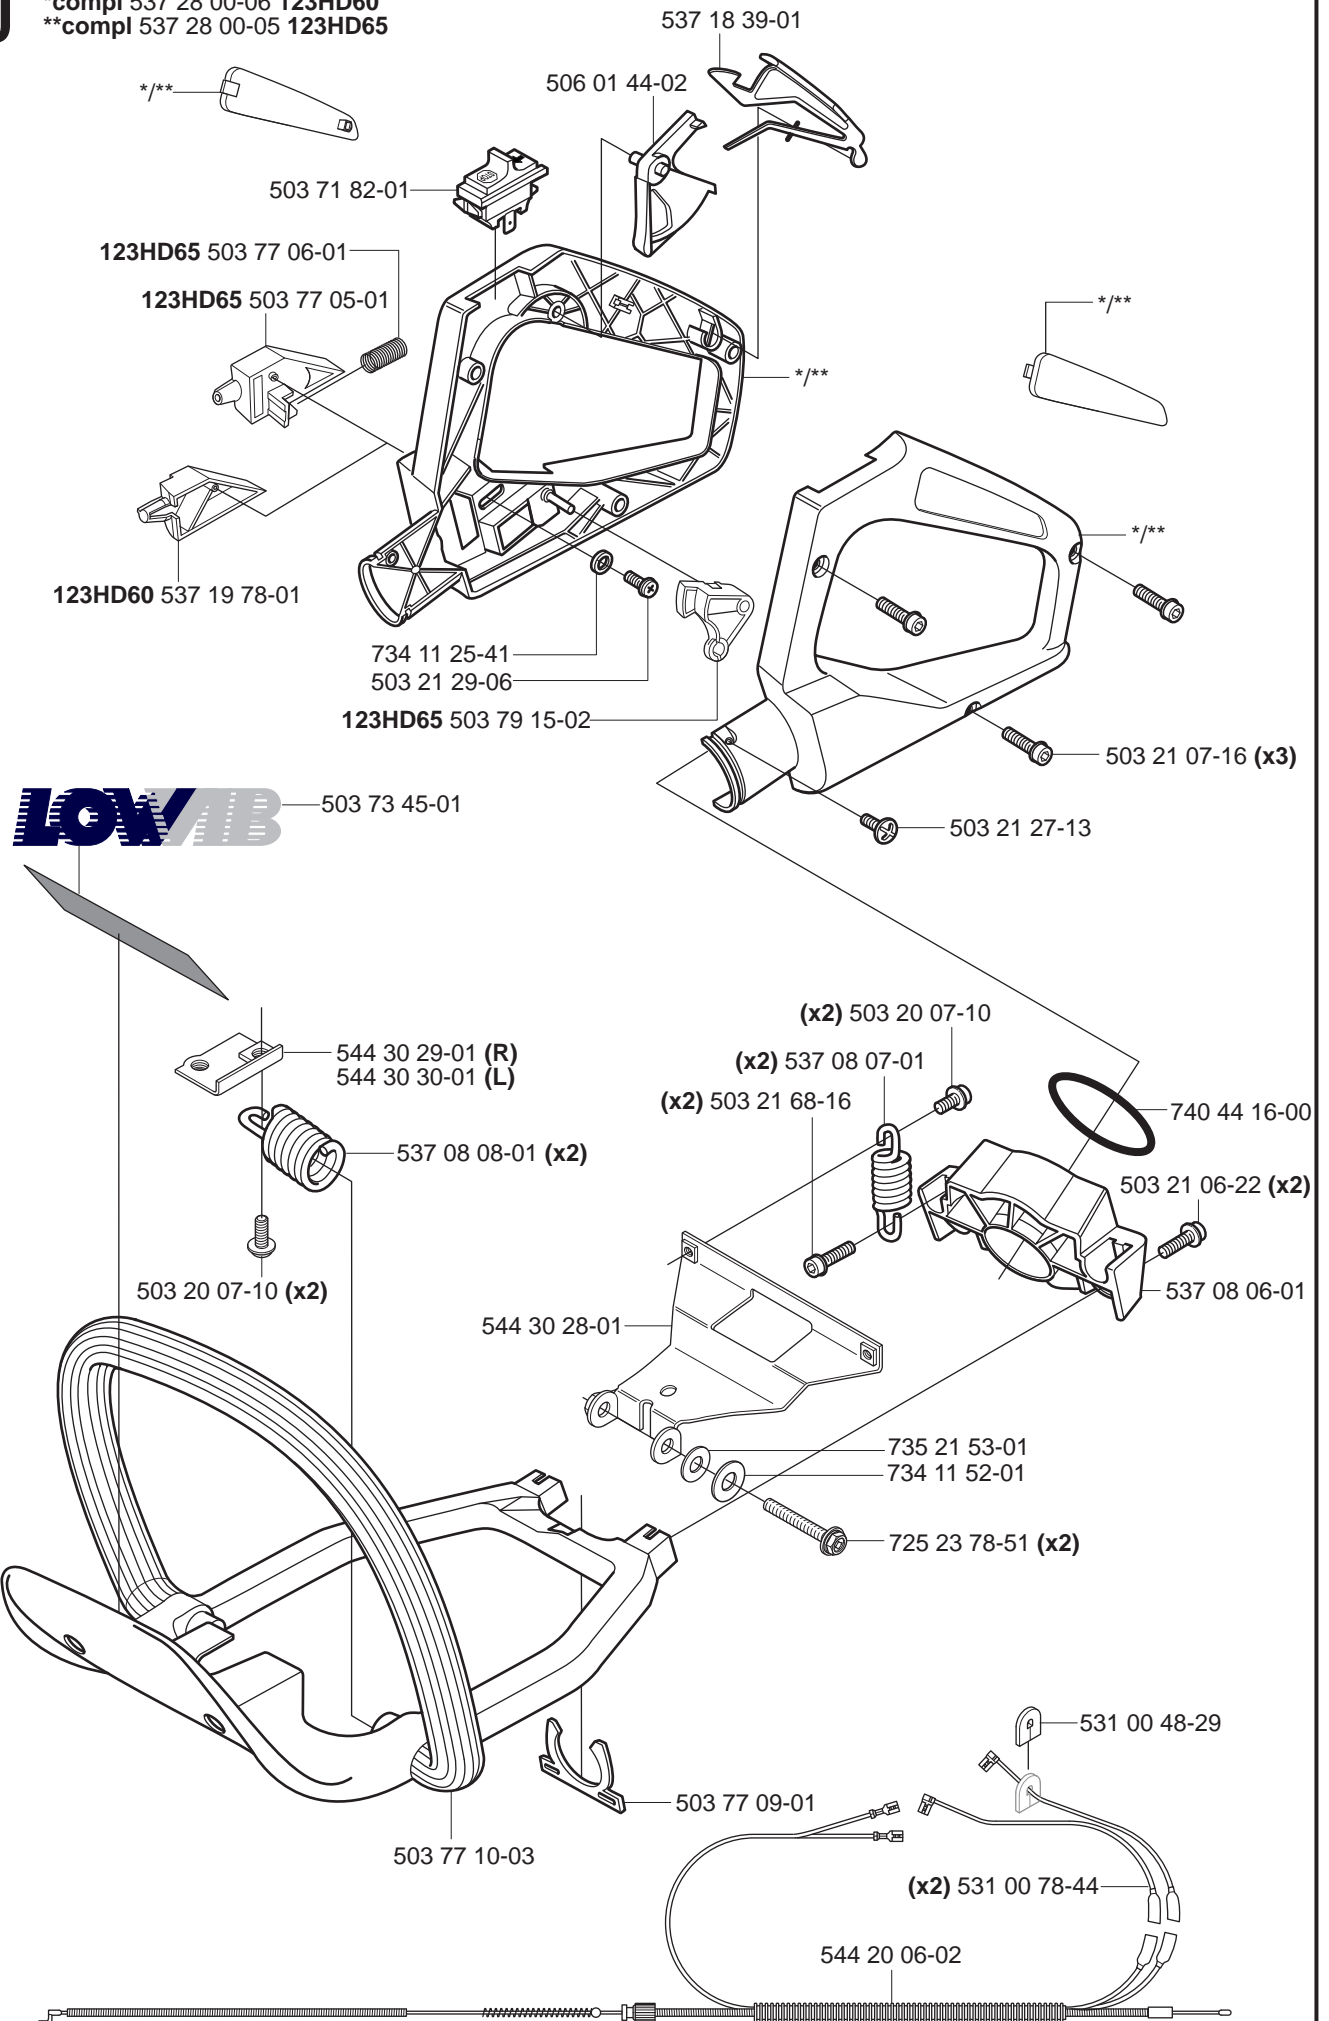


K

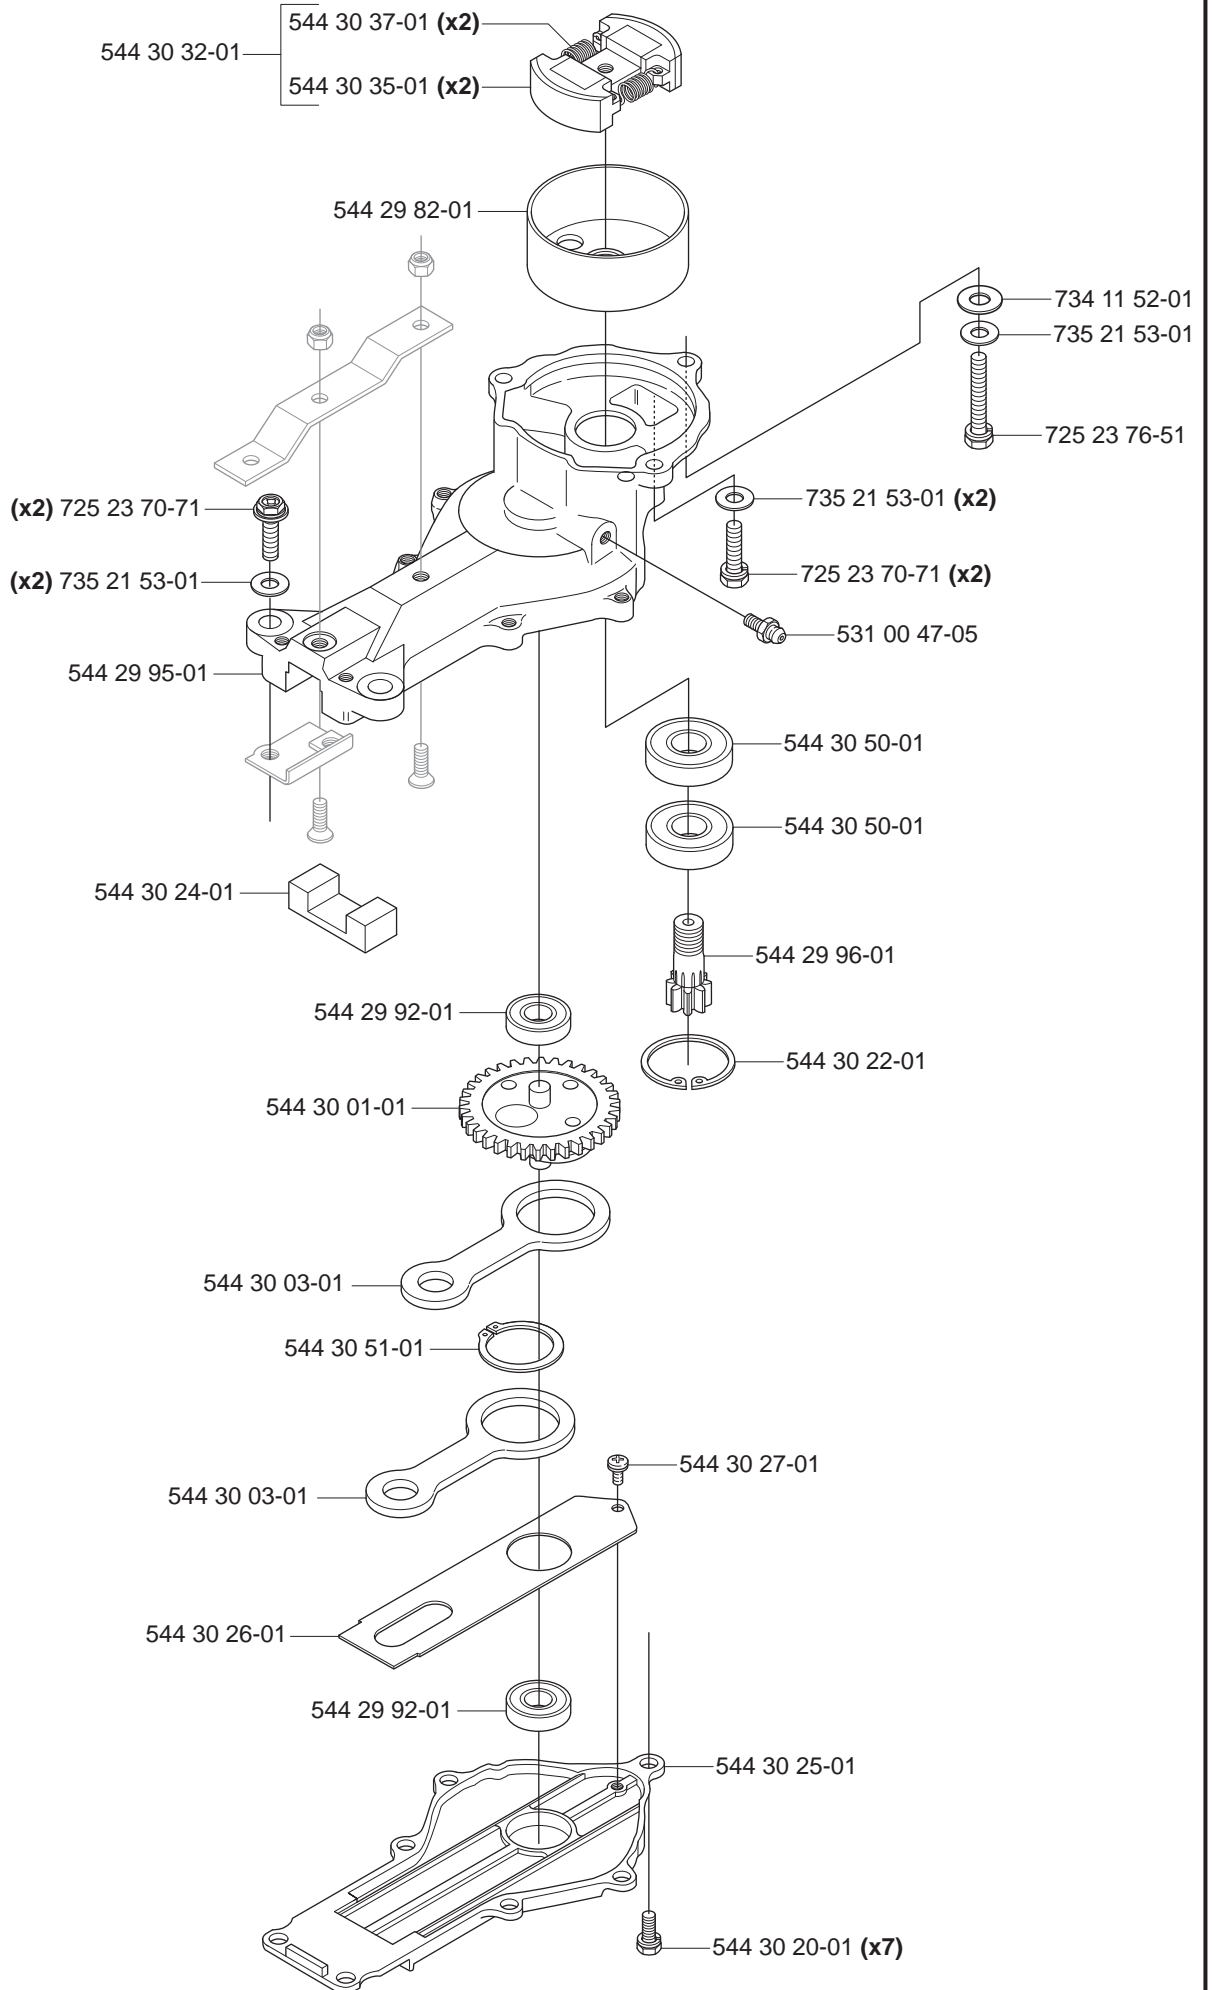 





L

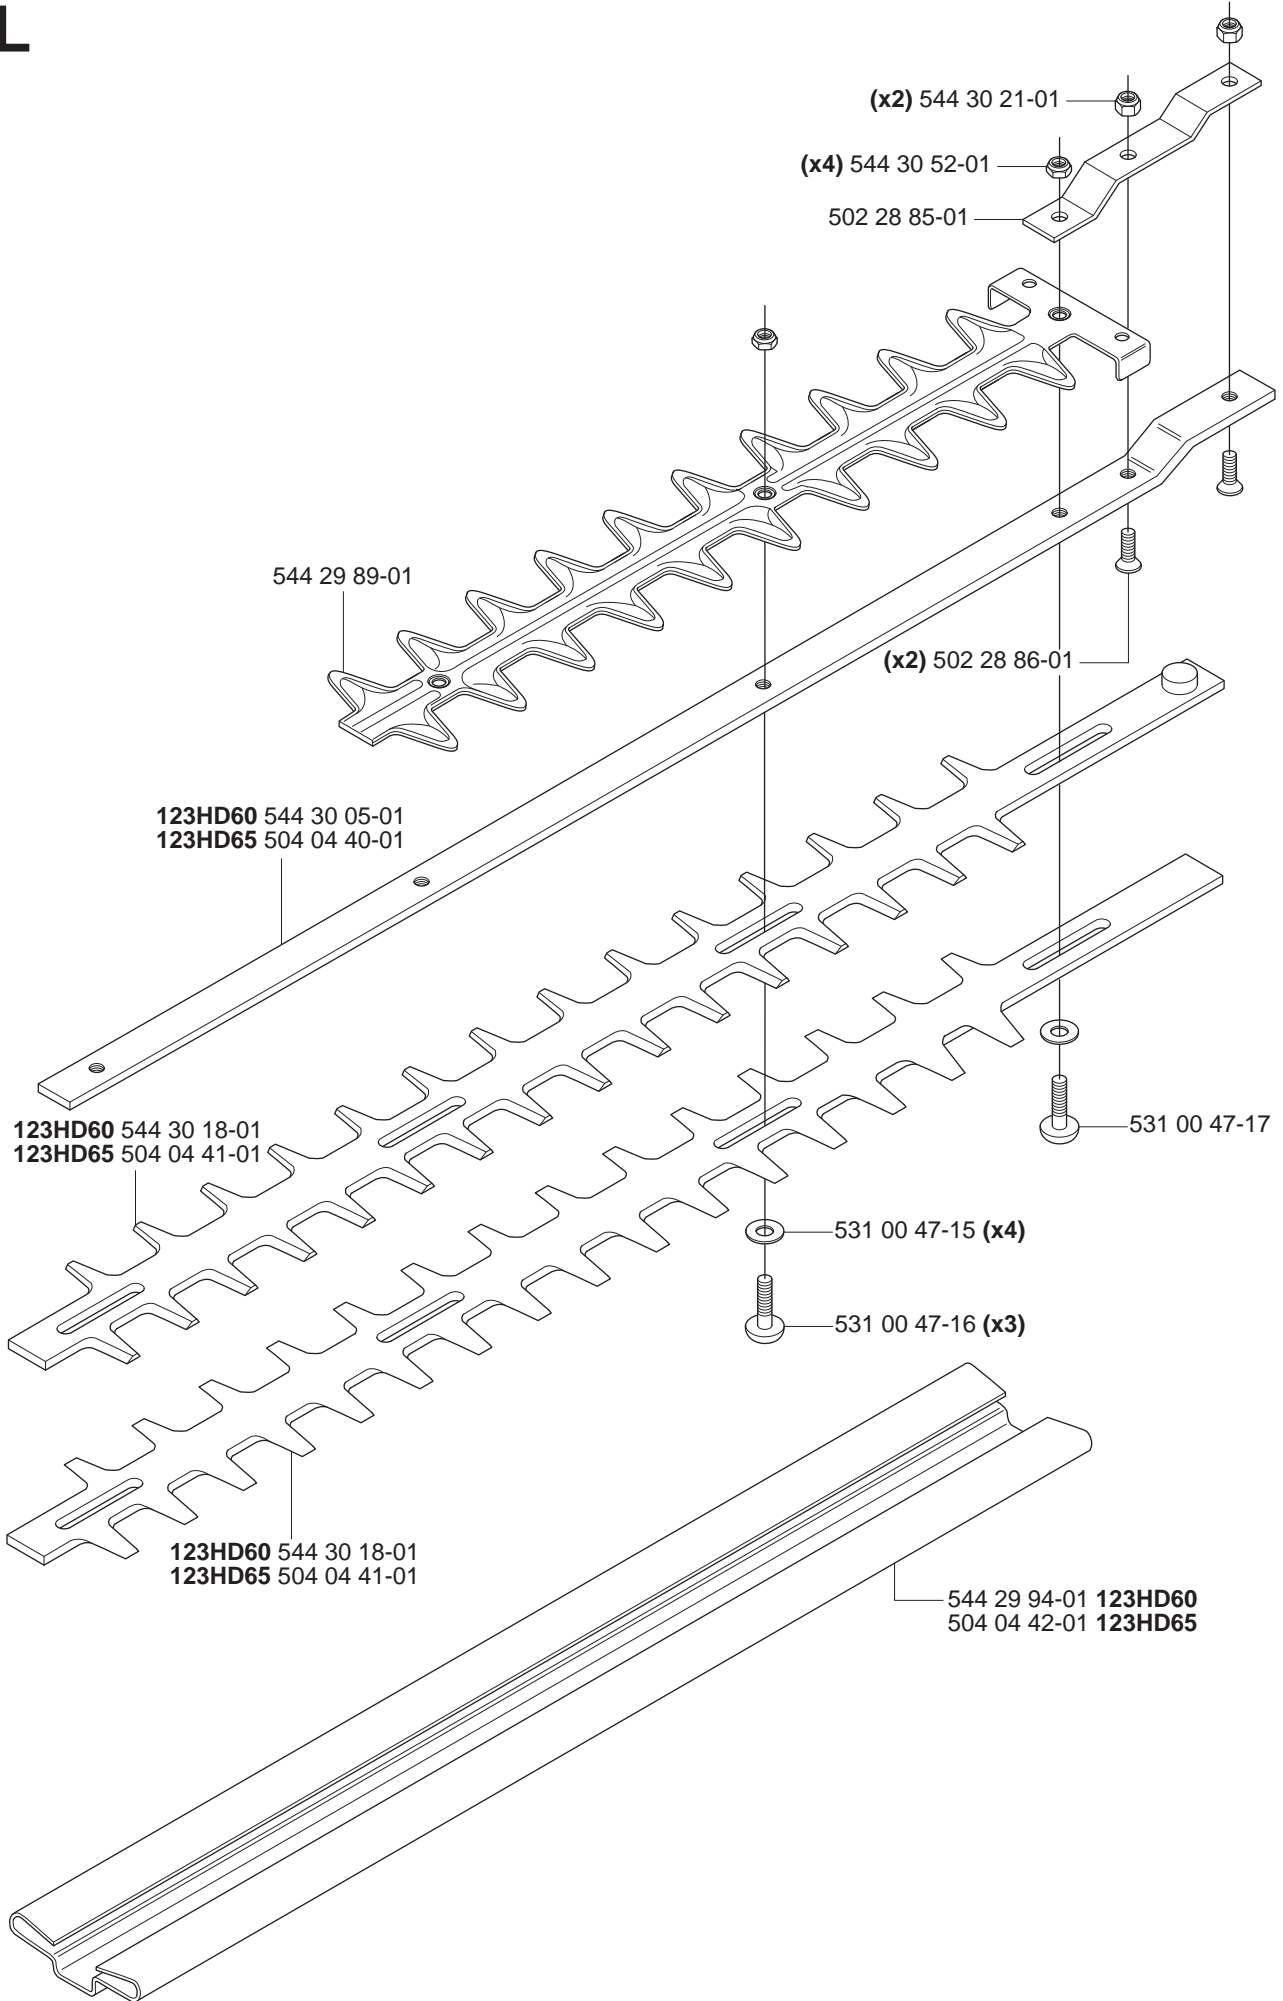 

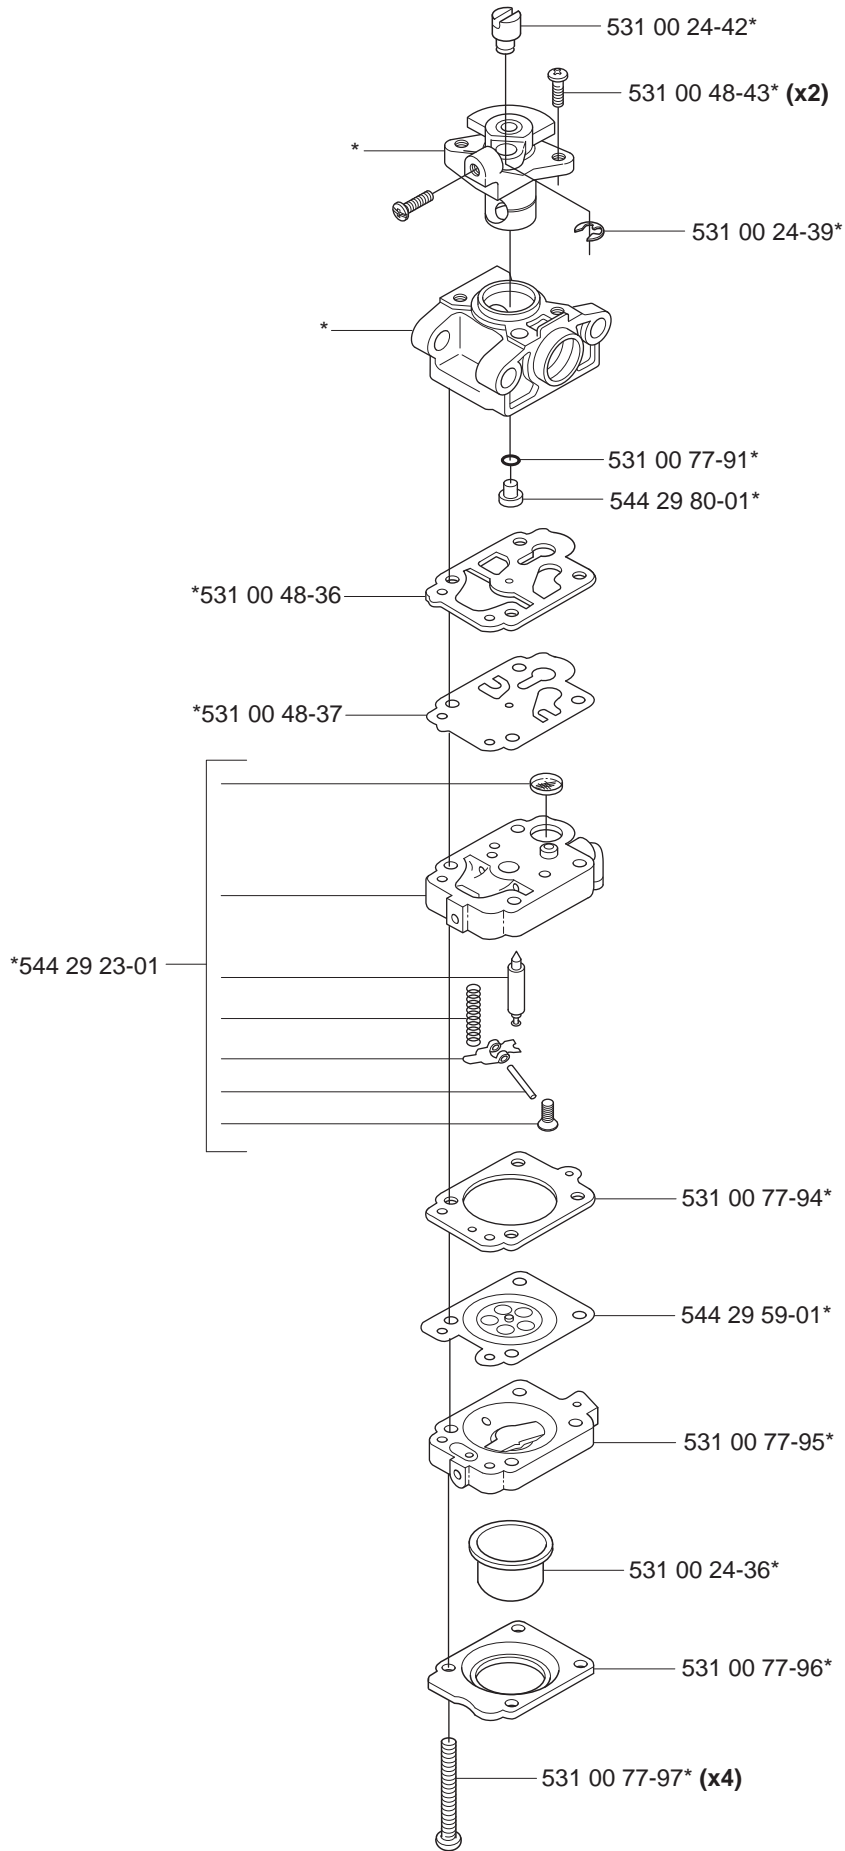 


N Accessories
Zubehöre
Accessoires
Acessorios
Tillbehör

    *compl 504 04 46-01

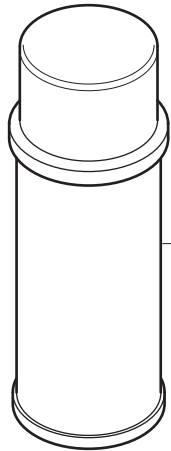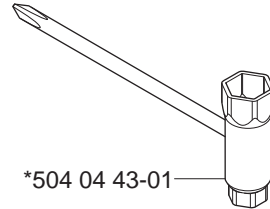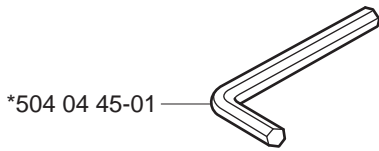

531 00 75-13 **UL22**

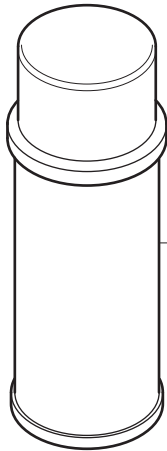 

531 00 75-12 **UL21**



531 00 92-05